

# Lexus Personalized Settings

Your vehicle includes a variety of electronic features that can be programmed to your preferences. Programming of these features is performed once at no charge, provided you obtain the service at the 30 day/1,000-mile scheduled maintenance service. Programming of your Lexus Personalized Settings requires special equipment and may be performed only by an authorized Lexus dealership.



## SC 430

## Door Lock Systems

---

### 1. Unlocking of doors

By pressing the remote key door unlock button, the following functions can be programmed:

- Pressing the unlock button one time will unlock both doors.
- Pressing the unlock button one time unlocks the driver's door, and two times unlocks all doors. (Standard)

### 2. Flashing of signal lights

Using the remote key, the following functions can be programmed:

- Press the LOCK/UNLOCK button on the remote key and the lights will not flash.
- Press the LOCK button and the lights will flash once. Press the UNLOCK button and the lights will flash twice. (Standard)

### 3. Unlocking of doors when placing vehicle into park

While the engine is running and the vehicle is placed into park, the vehicle can be programmed as follows:

- When placing the vehicle into park, all of the doors will remain LOCKED.
- When placing the vehicle into park, ALL the doors will automatically UNLOCK. (Standard)

### 4. Auto locking of doors at 13 mph

When the vehicle reaches 13 mph, the vehicle can be programmed as follows:

- The doors will not lock. (Standard)
- All of the doors will automatically lock.

### 5. Locking of doors when shifting from park into another range

When shifting the vehicle from park to another range, the following features can be programmed:

- When shifting from park to another range, the doors will not lock.
- When shifting from park to another range, while the brake pedal is PRESSED, all the doors will lock. (Standard)
- When shifting from park to another range, the doors will lock when the brake pedal is RELEASED.

## Power Windows

---

### 6. Using the remote key to open all windows

By pressing the UNLOCK button on the remote key for 3 seconds, the vehicle can be programmed as follows:

- The windows will not roll down.
- All the windows will roll down. (Standard)

## Trunk Release

---

### 7. Opening the trunk

By pressing on the trunk release button, located on the remote key, the trunk will open. The release button can be programmed to function as follows:

- Press button one time to release the trunk (No delay).
- Press button two times to release the trunk.
- Press and hold button for 0.8 seconds to release the trunk. (Standard)
- The button can be turned off so the trunk cannot be opened using the remote key.

## Lighting Systems

---

### 8. Illumination of cabin light

After closing the door, the interior lights can be adjusted to stay on for the following:

- 15 seconds. (Standard)
- 7.5 seconds.
- 30 seconds.

### 9. Illumination of the interior light

When the ignition switch is turned from ACC to OFF, the interior cabin light can be programmed as follows:

- Not illuminate.
- To illuminate. (Standard)

\* Note: The interior cabin light must be placed in the door mode.

### 10. Delay for headlights to turn off

After turning off the ignition and all the doors are closed, if the headlights are ON or in the AUTO position, the lights can be programmed as follows:

- Turn off immediately, when the vehicle is turned off and the driver's door is opened.
- Turn off in 30 seconds. (Standard)
- Turn off in 60 seconds.
- Turn off in 90 seconds.

### 11. Sensitivity of automatic headlights

While driving the vehicle and the headlight switch is placed in the "AUTO" mode, the front headlights can be programmed to turn on under darker or lighter ambient light conditions.

- |                          |                          |                          |                          |                          |
|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| <input type="checkbox"/> |
| Normal                   | Very Dark                | Dark                     | Light                    | Very light               |
| (Standard)               |                          |                          |                          |                          |

## Tilt Steering Wheel

---

### 12. Auto tilt away of the steering wheel

When the vehicle is placed in park, the ignition turned off, and the key is removed from the ignition, the steering wheel can be set to the following:

- Automatically move up and away from the driver position setting. (Standard)
- Remain in the current position, as set by the driver.

## Air Conditioner

---

### 13. Automatic recirculation of air when using A/C

While the air conditioner is ON or in the AUTO mode, the vehicle can be programmed for the following:

- To automatically switch between the recirculation mode and fresh air mode as necessary to meet the temperature requirements set. (Standard)
- When the climate control is turned on, the user must manually select the desired mode, recirculation or fresh air mode.

Date \_\_\_\_\_ Customer Signature \_\_\_\_\_

Repair Order Number (Dealer only)

Vehicle Identification Number (Dealer only)